



SR-SERIES TM

Cabinet Stand


SR-60, 80 & 120

Owner's Manual

NUVO-AQUARIUM


SR-60 CABINET STAND

SR-60 Cabinet Stand

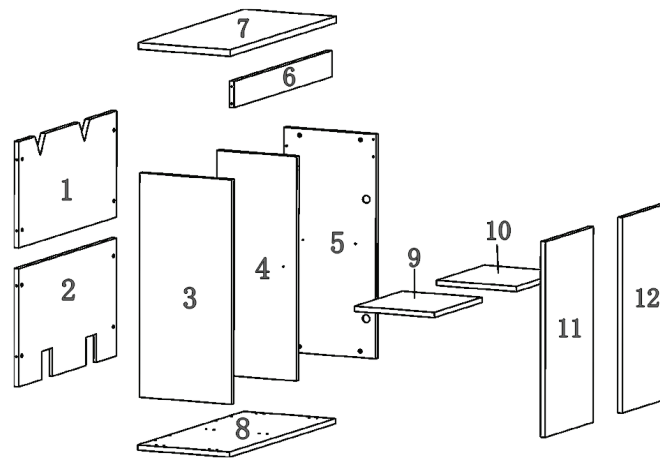


#	Description
1	Upper Back Panel
2	Lower Back Panel
3	Left Side Panel
4	Center Panel
5	Right Side Panel
6	Front Support Beam
7	Top Panel
8	Bottom Panel
9	Left Storage Shelf
10	Right Storage Shelf
11	Left Cabinet Door
12	Right Cabinet Door


Hardware Included

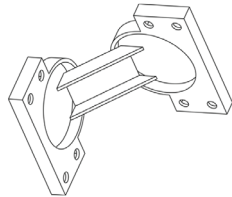


Door Hinge:
(4) x Door Hinge
(24) x Wood Screws

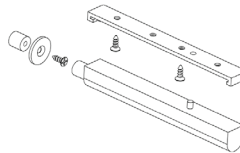

Push to Open System:
(2) x Latch and Catch System
(6) x Screws

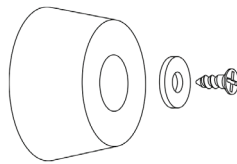

Rubber Feet:
(5) x Rubber Feet
(5) x Washer
(5) x Screws

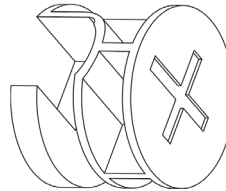


Cam Locks:
(30) x Cam Locks



Cam Screw:
(30) x Cam Screws



Wooden Dowel:
(18) x Wooden Dowels

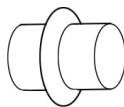


Shelf Pegs:
(8) x Shelf Pegs

SR-60 CABINET STAND


Assembled Stands

Step 1: Connect upper back panel to lower back panel using wooden dowels.

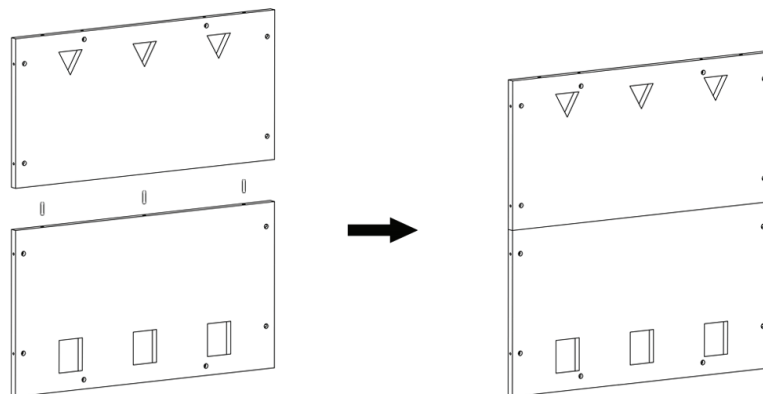


Step 2: Screw in cam screws into the left side panel.


S

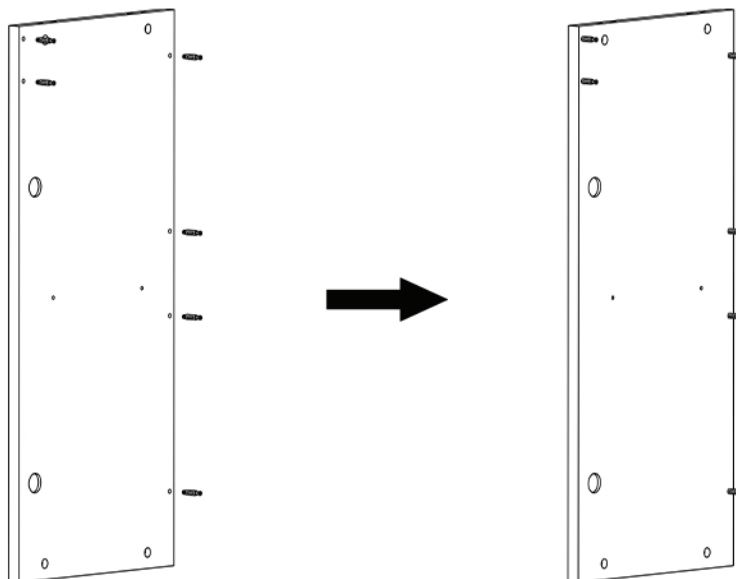

Step 3: Attach left side panel onto back panel, insert cam locks and tighten clockwise.

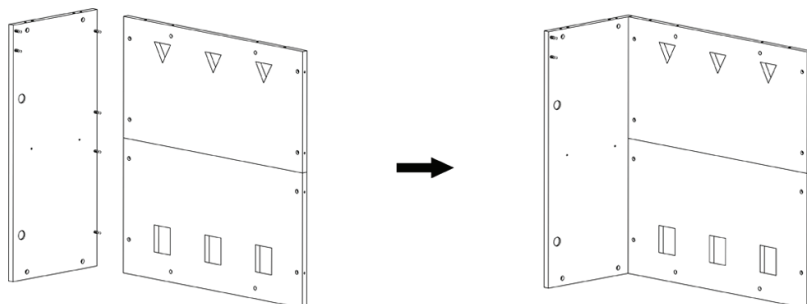


Step 4: Screw in cam screws into the right side panel.

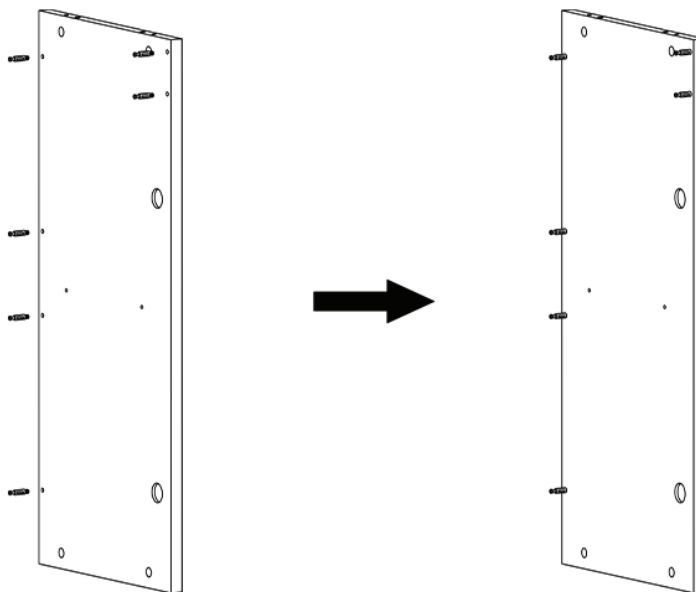



SR-60
CABINET STAND

Assembled Stands


Step 5: Attach front support beam and right side panels insert cam locks and tighten clockwise.

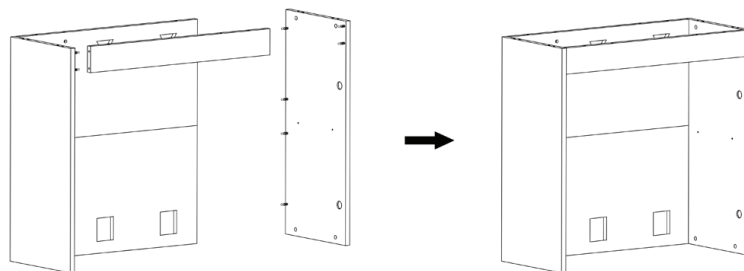


Step 6: Insert wooden dowels and cam screws into top panel

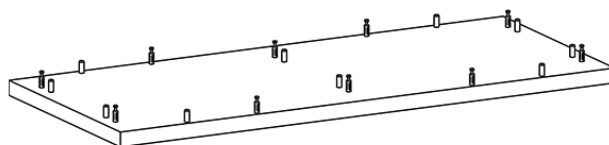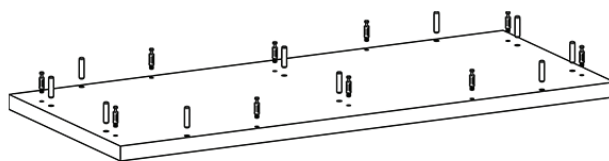

Step 7: Place top panel onto stand and insert cam locks and tighten clockwise.

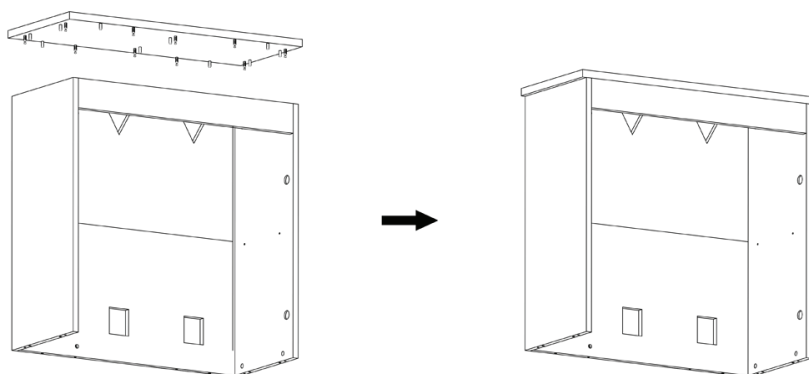



Step 8: Carefully place the stand onto the top panel and insert the center panel. Insert cam locks and tighten clockwise.

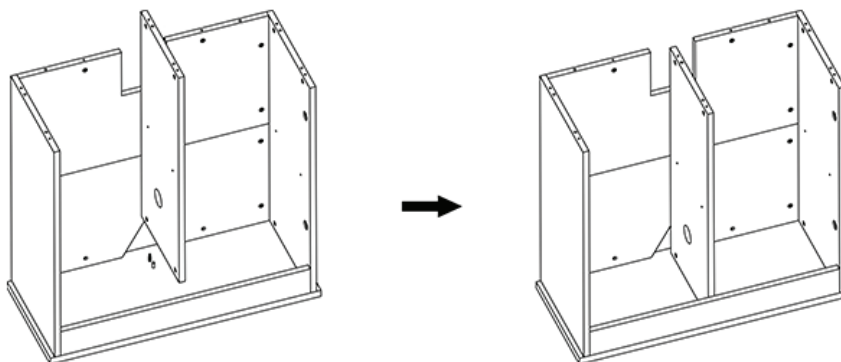



SR-60
CABINET STAND

Assembled Stands

Step 9: Insert wooden dowels and cam screws into bottom panel **S**

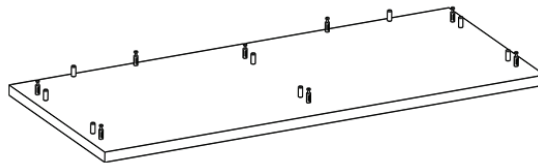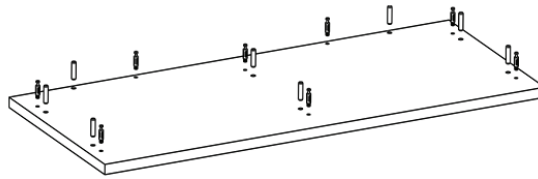


Step 10: Place bottom panel onto stand and insert cam locks and tighten clockwise.

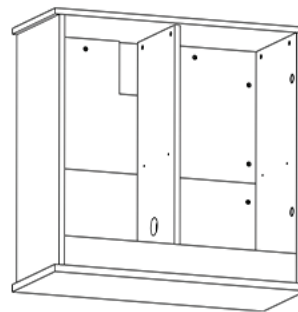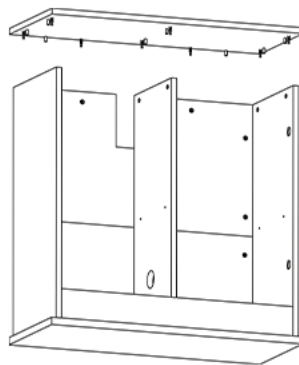


S
la

Step 11: Attach rubber feet to the bottom of the stand.

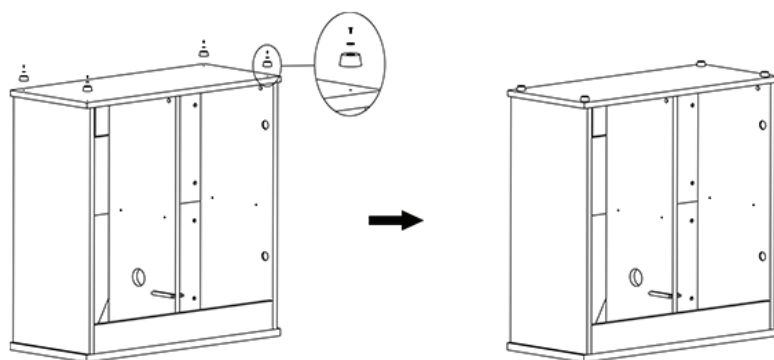


Step 12: Place stand on its rubber feet and attach push to open latch to the interior of the stand.

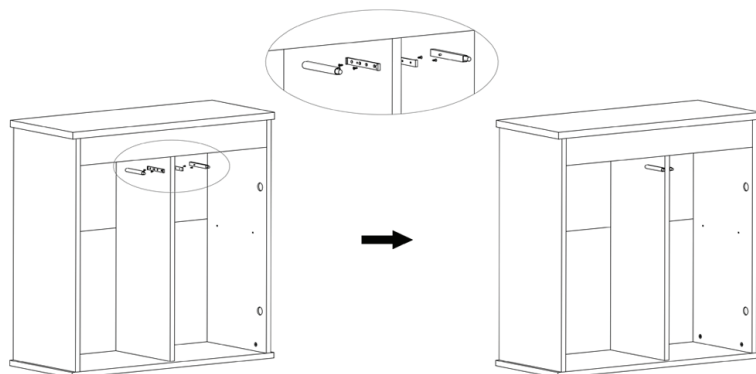


**SR-60
CABINET STAND**

Assembled Stands

Step 13: Attach door hinges and door catch onto doors.

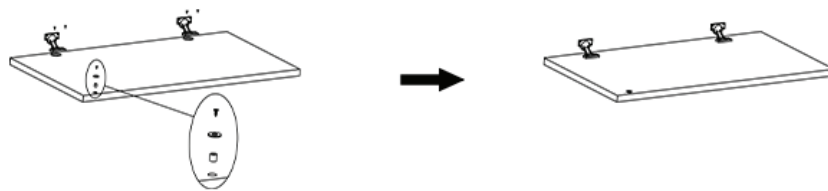


Step 14: Insert shelves with shelf pegs and attach cabinet doors using wood screws.

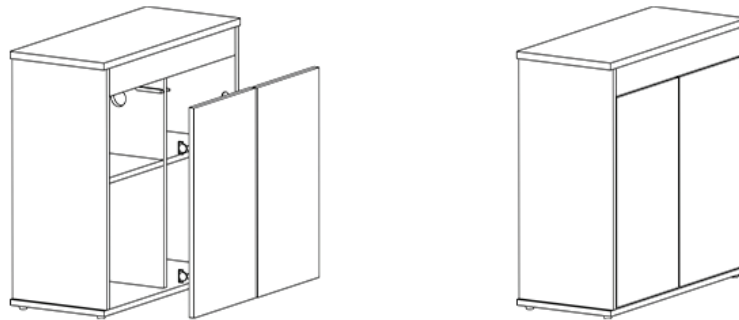

SR-60
CABINET STAND


SR-80 CABINET STAND

SR-80 Cabinet Stand

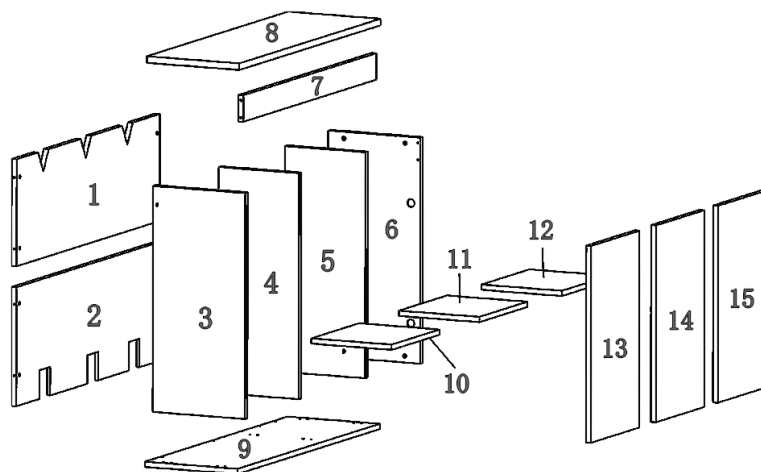


#	Description
1	Upper Back Panel
2	Lower Back Panel
3	Left Side Panel
4	Left Center Side Panel
5	Right Center Side Panel
6	Right Side Panel
7	Front Support Beam
8	Top Panel
9	Bottom Panel
10	Left Storage Shelf
11	Center Storage Shelf
12	Right Storage Shelf
13	Left Cabinet Door
14	Center Cabinet Door
15	Right Cabinet Door


Hardware Included

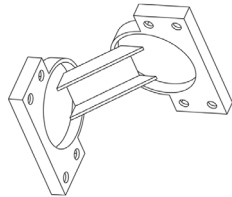


Door Hinge:
(6) x Door Hinge
(36) x Wood Screws

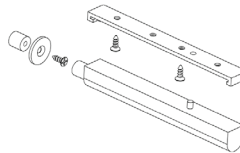

Push to Open System:
(3) x Latch and Catch System
(9) x Screws

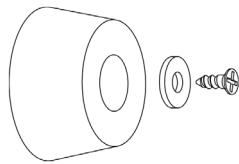

Rubber Feet:
(6) x Rubber Feet
(6) x Washer
(6) x Screws

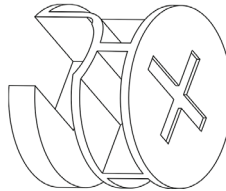


Cam Locks:
(36) x Cam Locks



Cam Screw:
(36) x Cam Screws



Wooden Dowel:
(22) x Wooden Dowels

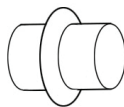


Shelf Pegs:
(12) x Shelf Pegs

SR-80 CABINET STAND


Assembled Stands

Step 1: Connect upper back panel to lower back panel using wooden dowels.

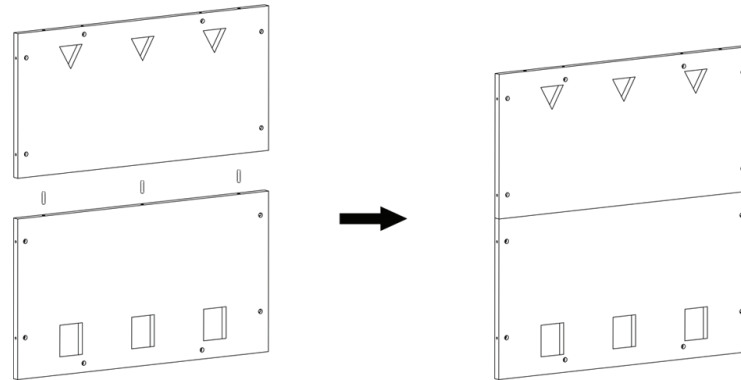


Step 2: Screw in cam screws into the left side panel.


S

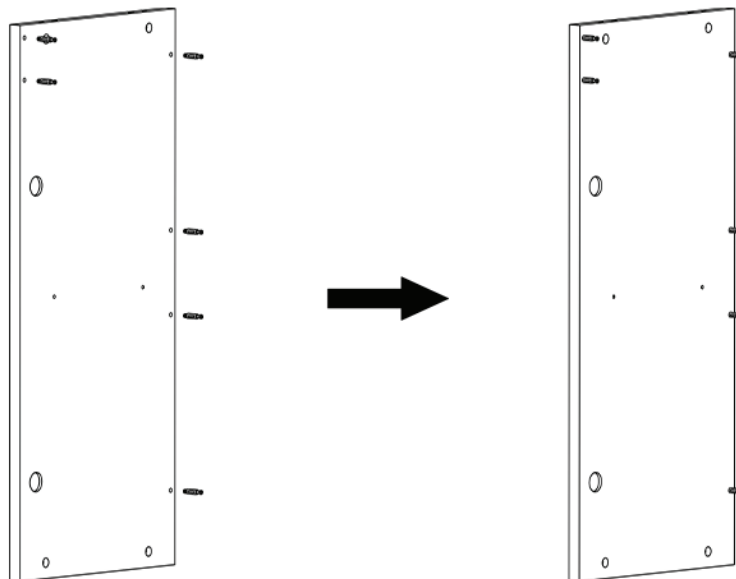

Step 3: Attach left side panel onto back panel, insert cam locks and tighten clockwise.

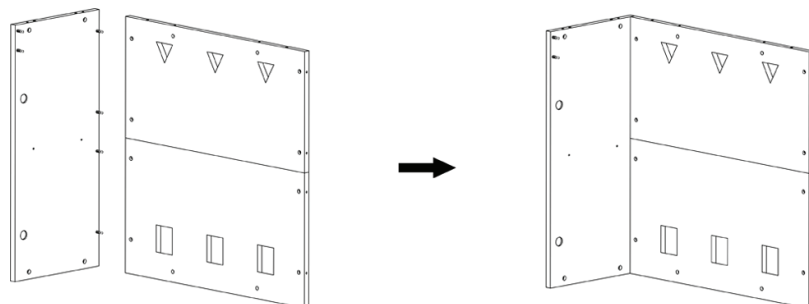


Step 4: Screw in cam screws into the right side panel.

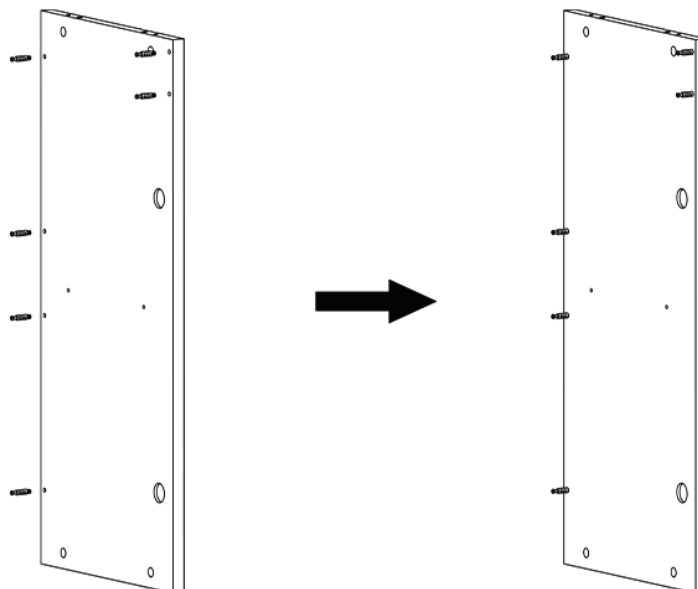



SR-80
CABINET STAND

Assembled Stands

Step 5: Attach front support beam, right center panel and right side panel, insert cam locks and tighten clockwise.

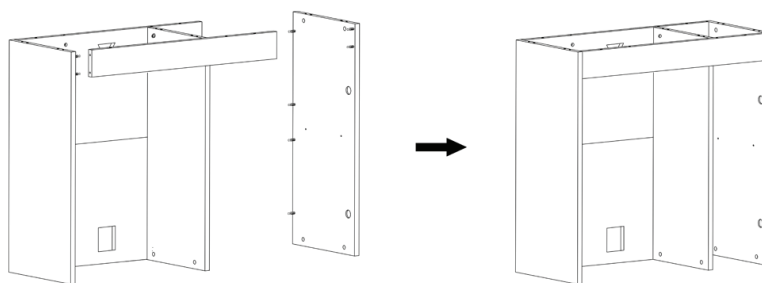


Step 6: Insert wooden dowels and cam screws into top panel

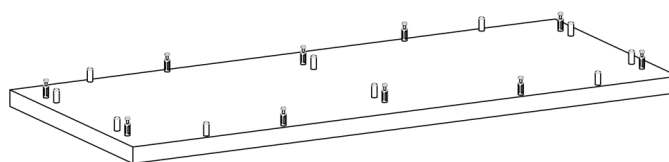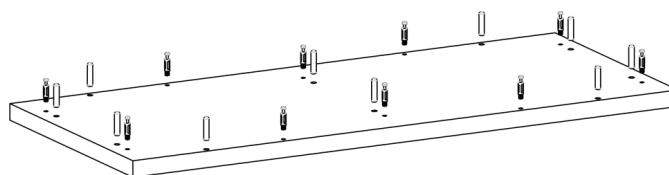


SR-80
CABINET STAND

Step 7: Place top panel onto stand and insert cam locks and tighten clockwise.


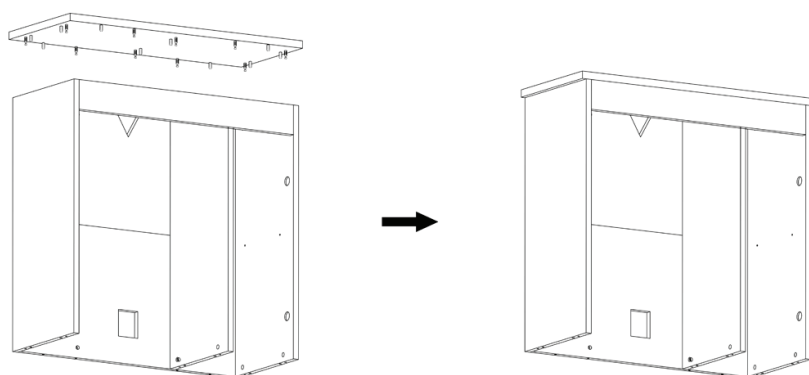


Step 8: Carefully place the stand onto the top panel and insert the left center panel. Insert cam locks and tighten clockwise.

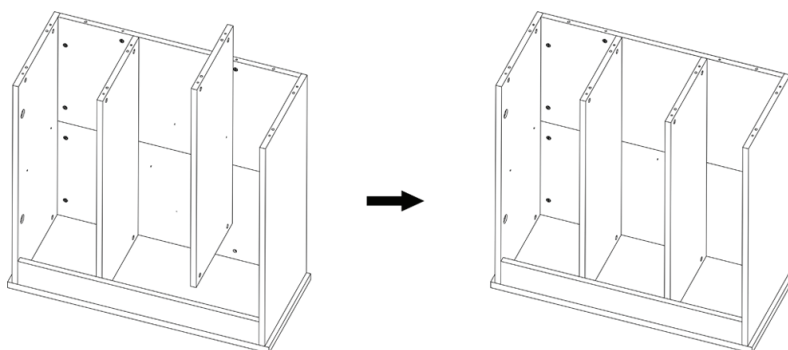



Assembled Stands

Step 9: Insert wooden dowels and cam screws into bottom panel **S**

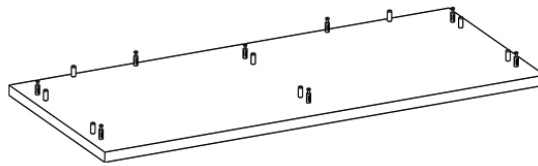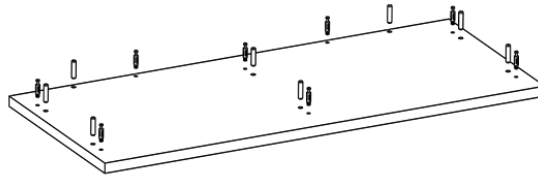


Step 10: Place bottom panel onto stand and insert cam locks and tighten clockwise.

S
la

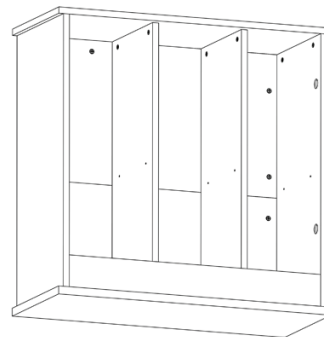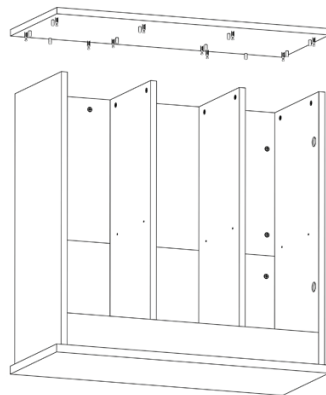


**SR-80
CABINET STAND**

Step 11: Attach rubber feet to the bottom of the stand.

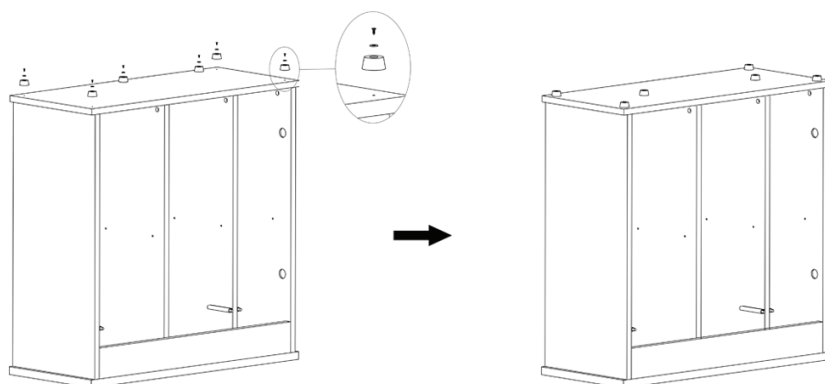


Step 12: Place stand on its rubber feet and attach push to open latch to the interior of the stand.

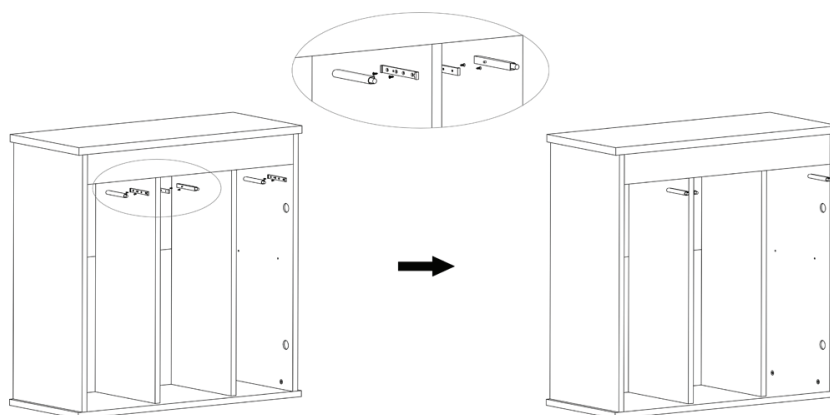


**SR-80
CABINET STAND**

Assembled Stands

Step 13: Attach door hinges and door catch onto doors.

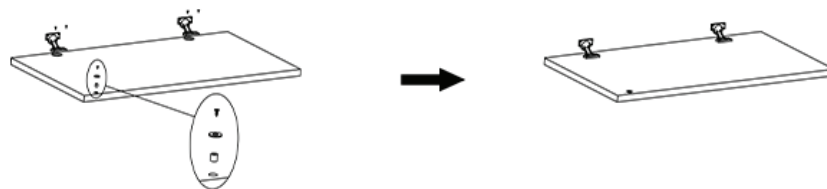


Step 14: Insert shelves with shelf pegs and attach cabinet doors using wood screws.

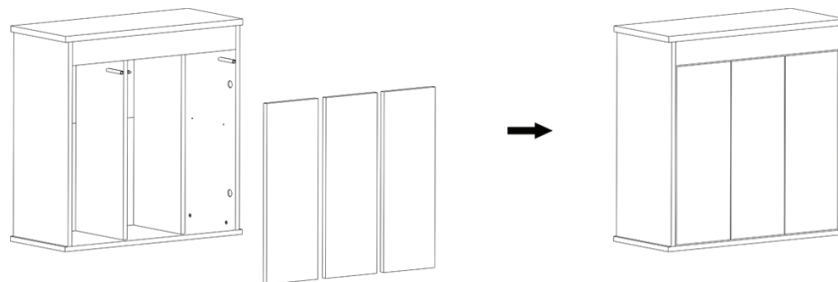

SR-80
CABINET STAND


SR-120 CABINET STAND

SR-120 Cabinet Stand

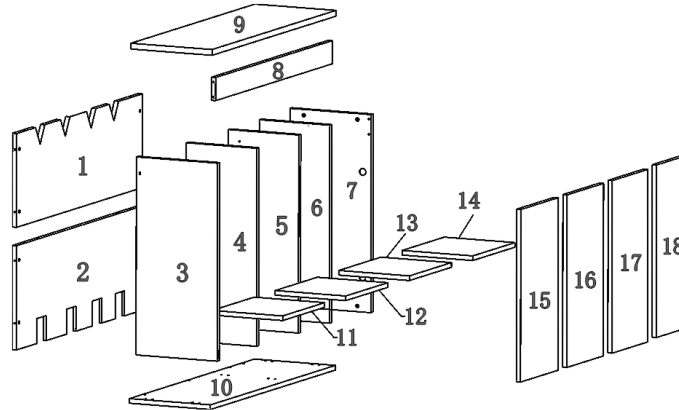


#	Description
1	Upper Back Panel
2	Lower Back Panel
3	Left Side Panel
4	Left Center Side Panel
5	Center Side Panel
6	Right Center Side Panel
7	Right Side Panel
8	Front Support Beam
9	Top Panel
10	Bottom Panel
11-14	Storage Shelves
15	Left Cabinet Door
16	Left Center Cabinet Door
17	Right Center Cabinet Door
18	Right Cabinet Door


Hardware Included

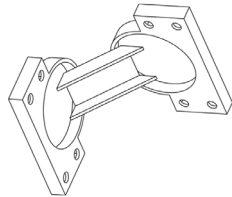


Door Hinge:
(8) x Door Hinge
(48) x Wood Screws

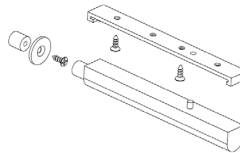

Push to Open System:
(4) x Latch and Catch System
(12) x Screws

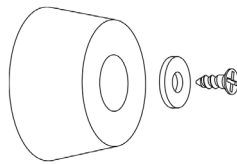

Rubber Feet:
(8) x Rubber Feet
(8) x Washer
(8) x Screws

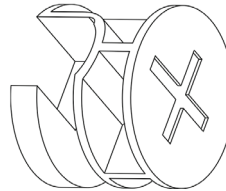


Cam Locks:
(43) x Cam Locks



Cam Screw:
(43) x Cam Screws



Wooden Dowel:
(27) x Wooden Dowels

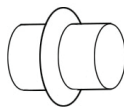


Shelf Pegs:
(16) x Shelf Pegs

SR-120 CABINET STAND


Assembled Stands

Step 1: Connect upper back panel to lower back panel using wooden dowels.

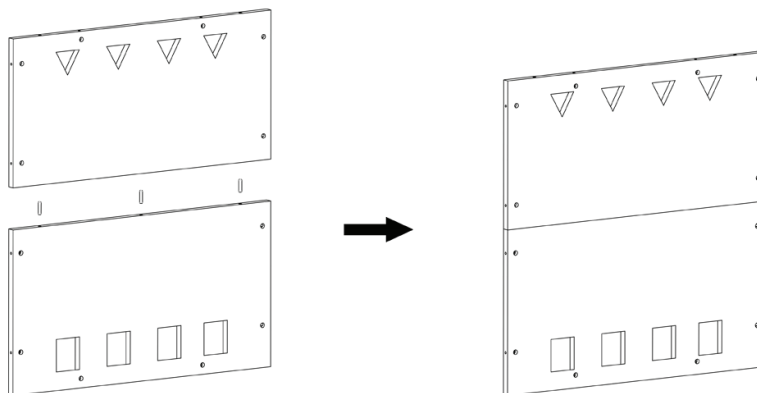


Step 2: Screw in cam screws into the left side panel.


S

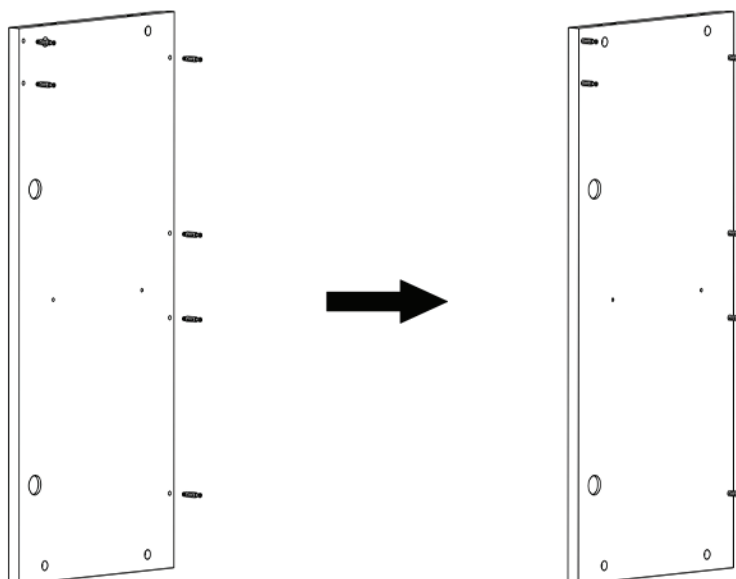

Step 3: Attach left side panel onto back panel, insert cam locks and tighten clockwise.

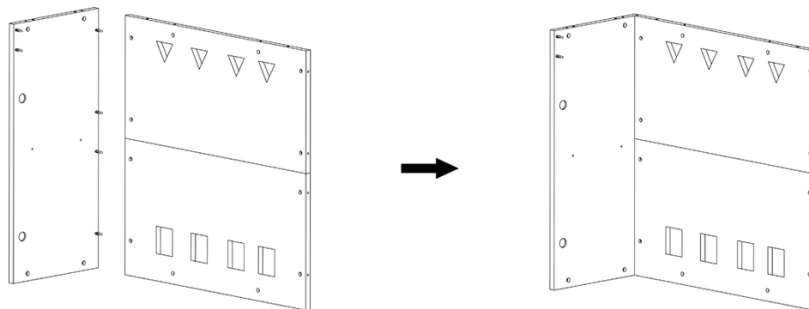


Step 4: Screw in cam screws into the right side panel.

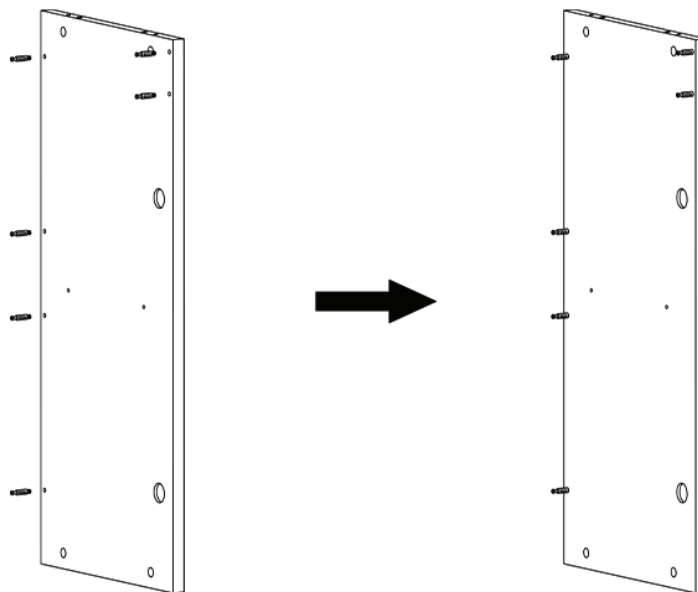


**SR-120
CABINET STAND**

Assembled Stands


Step 5: Attach front support beam, center panel and right side panel insert cam locks and tighten clockwise.

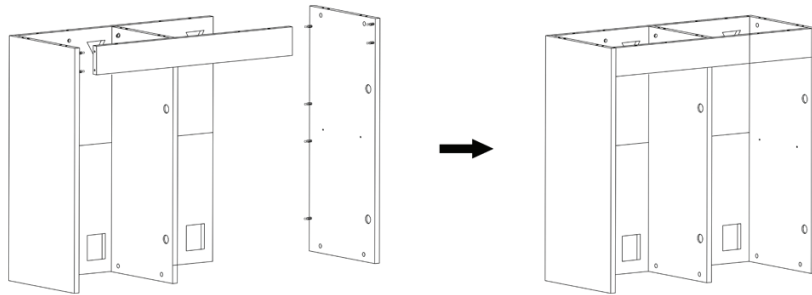


Step 6: Insert wooden dowels and cam screws into top panel

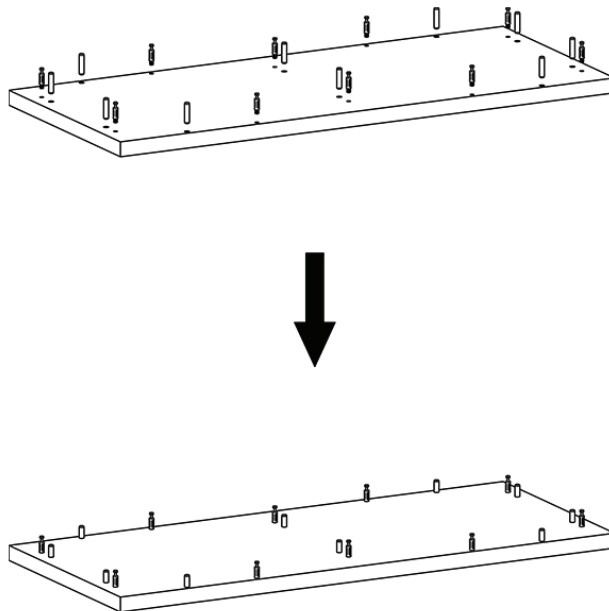

Step 7: Place top panel onto stand and insert cam locks and tighten clockwise.

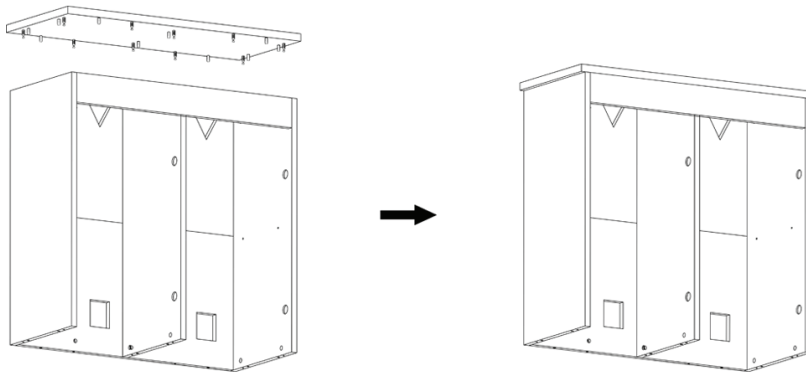



Step 8: Carefully place the stand onto the top panel and insert the left and right center panel. Insert cam locks and tighten clockwise.

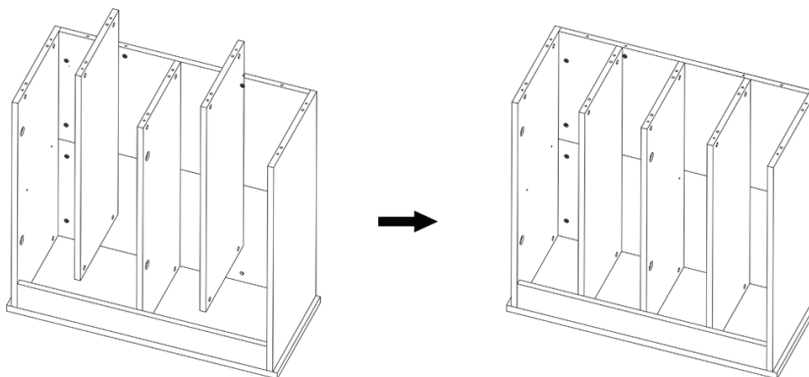

Assembled Stands



Step 9: Insert wooden dowels and cam screws into bottom panel.

S

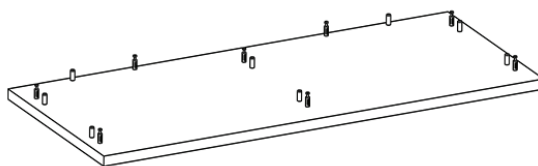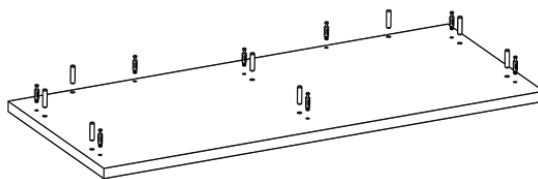


S
la


Step 10: Place bottom panel onto stand and insert cam locks and tighten clockwise.

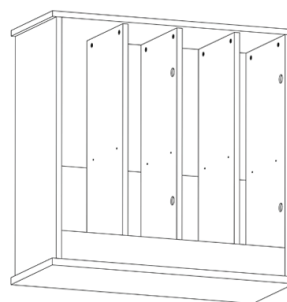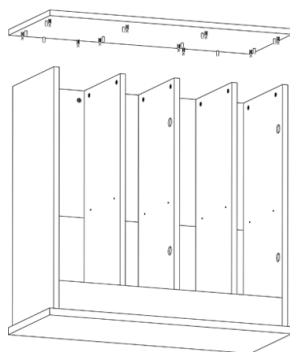

Step 11: Attach rubber feet to the bottom of the stand.

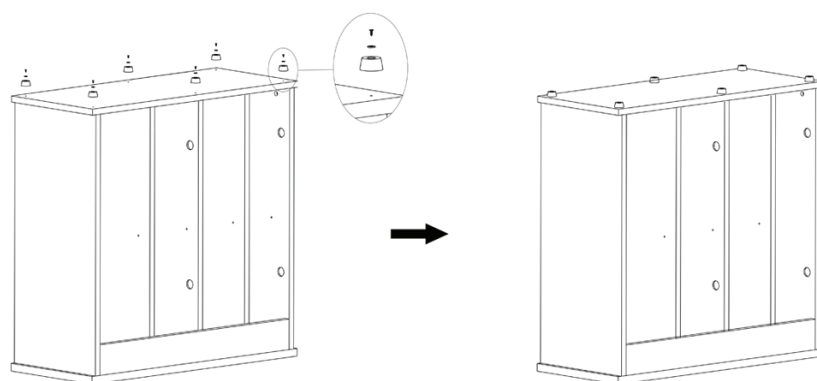


Step 12: Place stand on its rubber feet and attach push to open latch to the interior of the stand.

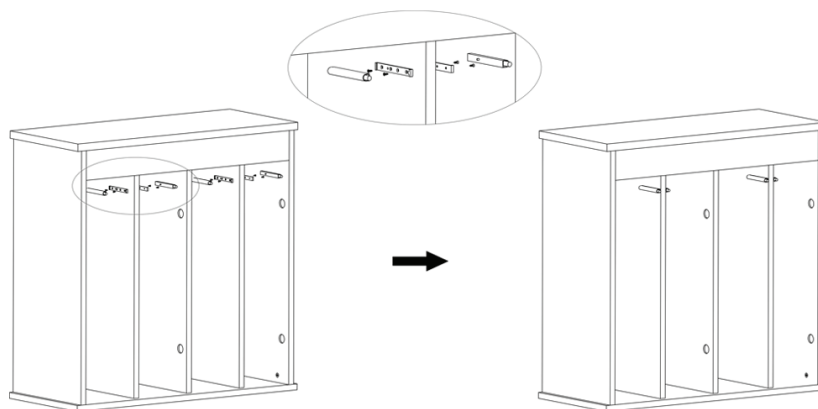


**SR-120
CABINET STAND**

Assembled Stands

Step 13: Attach door hinges and door catch onto doors.

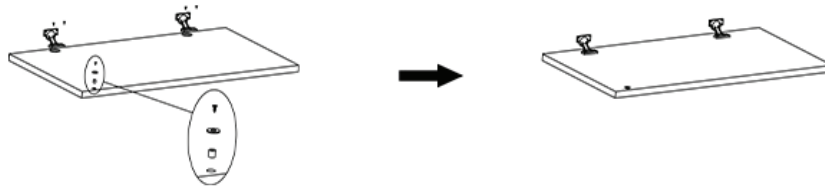

Step 14: Insert shelves with shelf pegs and attach cabinet doors using wood screws.

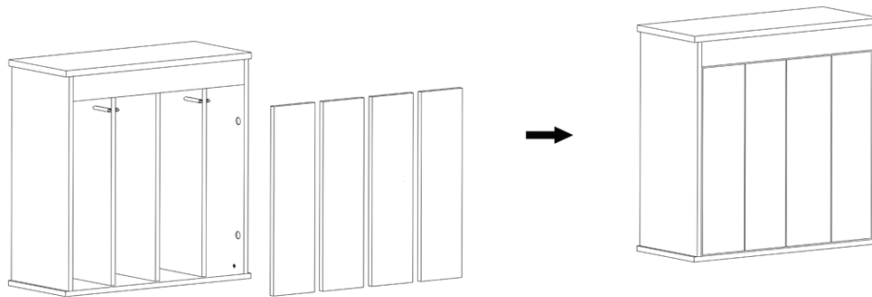

**SR-120
CABINET STAND**





WWW.INNOVATIVE-MARINE.COM

A Division of

